

CARSUPPORT	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	19A02	19A02H

<u>MAKE:</u>	<u>TYPE:</u>	<u>YEAR:</u>
FIAT	Fiorino	1994-

GRAYSTON ENGINEERING LIMITED

115 Roebuck Road • Chessington • Surrey KT9 1JZ • UK
Telephone: 020 8974 1122 Fax: 020 8974 2288

PARTS (x2)

- (1) upper plate L/R
- (2) rubber cap
- (3) tapping screw
- (4) auxiliary spring
- (5) rubber cap
- (6) lower seat

INSTRUCTIONS

1. Jack up car until rear wheels are off the ground.
2. Place lower seat(6) with rubber cap(5) onto the leaf spring between the U-bolts.
3. Place auxiliary spring(4) with upper plate(1) (note Left/Right hand side) and rubber cap(2) onto lower seat(6).
4. Guide pin of upper plate(1) into existing rubber ring in hole on chassis member. Secure with tapping screw(3).
5. Lower vehicle and check installation of springs.
6. After fitting the auxiliary springs check and adjust the loadsensing brake valve as per Fiat's manual.