



Manufacturers of Spring Assisters & Motor Accessories

GRAYSTON ENGINEERING LIMITED

115 Roebuck Road • Chessington • Surrey KT9 1JZ • UK

Telephone: 020 8974 1122 Fax: 020 8974 2288

CARSUPPORT

HEAVY DUTY

21A10H

FORD Transit 86-

round axle ϕ 82 mm

E

PARTS (x2)

- (1) upper seat + bumpstop
- (2) auxiliary spring
- (3) bumpstop
- (4) lower seat
- (5) bracket
- (6) washer + nut

INSTRUCTIONS

1. Jack up vehicle so that rear wheels are off the ground.
2. Remove original lock plate and bumpstop.
3. Install lower seat(4) + bumpstop(3), do not tighten nuts(6).
4. Push aux. spring(2) over lower bumpstop(3) with seat + bumpstop(1) on top and position the studbolt into the hole.
5. Let car down and adjust brackets(5) to straighten aux. spring(2). Tighten nuts.
6. Check / adjust load adjusting brake valve as per Ford manual.

