



Manufacturers of Spring Assisters & Motor Accessories

GRAYSTON ENGINEERING LIMITED
115 Roebuck Road • Chessington • Surrey KT9 1JZ • UK U.K.
Telephone: 020 8974 1122 Fax: 020 8974 2288 3

21B02

F O R D
=====

ESCORT MK1 & MK2 incl. ESTATE/KOMBI 67-80

GB
INSTRUCTIONS

1. Jack up rear of car so that rear wheels are off the ground.
2. Place upper seat(2) with rubber collar(3) over chassis member directly above rubber buffer on rear axle.
3. Place steel ring(4) on buffer.
4. Place flat (ground) spring end of aux. spring(1) on steel ring(4), and compress onto upper collar(3).
Turn spring(1) until it fits perfectly.

