

# GRAYSTON®

Manufacturers of Spring Assisters & Motor Accessories

**GRAYSTON ENGINEERING LIMITED**

115 ROEBUCK ROAD, CHESSINGTON, SURREY KT9 1JZ, U.K.  
Telephone: 0181-974 1122 Facsimile: 0181-974 2288

## MITSUBISHI

### SPACE WAGON 02/84

|            |        |
|------------|--------|
| STANDARD   | 28C08  |
| HEAVY DUTY | 28C08H |

#### Parts List (2x)

- (1) Auxiliary spring
- (2) Rubber bump stop
- (3) Upper spring seat
- (4) Rubber bump stop
- (5) Nut

#### INSTRUCTIONS

- 1 Remove wheels at the rear.  
Disconnect lower end shock absorbers.
- 2 Remove original bump stop and main spring.
- 3 Drill at  $\varnothing$  8.0mm hole in the centre of the upper main spring seats.
- 4 Place upper spring seat (3) rubber bump stop (2) in widest end of auxiliary spring (1) and rubber bump stop (4) at the bottom. Insert auxiliary spring (1) into main spring. Mount both springs.
- 5 Re-connect rubber bump stops (4), shock absorbers and rear wheels.

