

<b>CARSUPPORT</b>	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	28C11	28C11H

<u>MAKE:</u>	<u>TYPE:</u>	<u>YEAR:</u>
Mitsubishi	Pajero	82-91
Mitsubishi	Pajero	91-

### **ATTENTION**


The heavy duty set 28C11H is only to be used for vehicles with a permanent heavy load.

### PARTS

- (1) 2x upper seat
- (2) 2x auxiliary spring
- (3) 2x bottom seat + bumpstop

### INSTRUCTIONS

1. Measure a reference of the loadsensing brake valve setting (needed after fitting kit, see 7).
2. Disconnect bracket of brakepipe and the lower end of rear shock absorbers.
3. Jack up rear of car and remove main springs.
4. Drill a  $\phi 8$  mm hole down through the centre of lower main spring seats.
5. Insert auxiliary spring(2) and parts (1,3) inside main spring and fit the assembly.
6. Reconnect bracket of brakepipe and the lower end of rear shock absorbers.
7. Adjust the loadsensing brake valve to the measured reference (see 1).

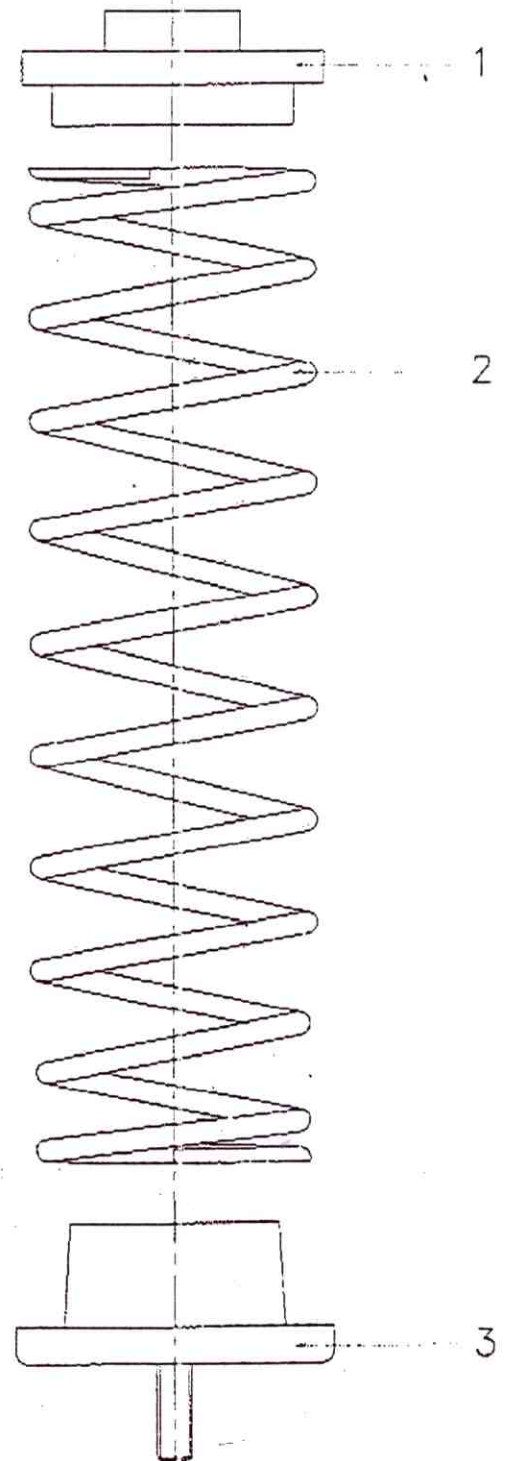

TCB.005.01