

CARSUPPORT

STANDARD  
30A01

HEAVY DUTY  
30A01H

OPEL Campo 4x2 en 4x4 type TFR/TFS 01/92-  
ISUZU Campo 4x2 en 4x4 type TFR/TFS 01/89-01/92

## E

### PARTS (x2)

- (1) upper plate
- (2) long bumpstop
- (3) auxiliary spring
- (4) short bumpstop
- (5) lower bracket
- (6) clamp
- (7) washer (x4)
- (8) self locking nut (x4)

### INSTRUCTIONS

1. Jack up car until rear wheels are off the ground.
2. Remove original bumpstop.
3. Install upper plate(1) together with original bumpstop.
4. Place lower bracket(5) with clamp(6) on axle straight beneath the upper plate, next to the fitting plate of the U-bolts. Slightly tighten nuts(8).
5. Place auxiliary spring(3) with bumpstops(2,4) between upper seat(1) and lower bracket(5).  
**Attention:** long bumpstop on top.
6. Let car down and adjust lower bracket(5) to straighten aux. spring(3). Tighten nuts(8).
7. After fitting or removing the auxiliary springs check/adjust the loadsensing brake valve as per Opel/Isuzu manual.

