

CARSUPPORT	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	38C06	38C06H

<u>MAKE:</u>	<u>TYPE:</u>		<u>YEAR:</u>
AUDI	A3	excl. Quattro	1997-
SEAT	Leon		2000-
SEAT	Toledo		1999-
SKODA	Octavia	incl. Estate	1997-
VW	Golf IV	incl. Estate	1997-
VW	Bora	incl. Estate	1998-
VW	New Beetle		1998-

PARTS

- (1) 2x auxiliary spring
- (2) 2x spring seat

INSTRUCTIONS

1. Only Skoda Octavia (Estate) without ABS:
 Measure the dimension X of the load-sensing brake valve see fig. 1.
2. Disconnect lower end of rear shock absorbers.
3. Jack up rear of car, do **not** stretch brakepipe. There is no need to remove the main springs.
4. Screw end of auxiliary spring(1) up through lowest side opening into the main spring.
5. Place spring seat(2) in hole of the suspension arm.
6. Reconnect lower end of rear shock absorbers.
7. Only Skoda Octavia (Estate) without ABS:
 Adjustment load-sensing brake valve:
 Before adjusting the valve, drive the car approx. 10m so that the suspension can settle down to the new ride height.
 Adjust the load-sensing brake valve to the measured dimension X (see instruction 1 and fig. 1)

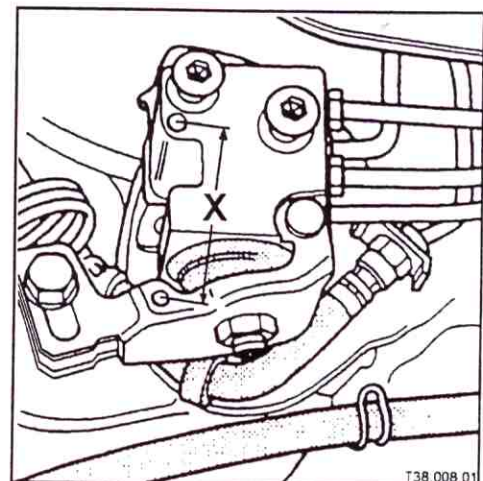
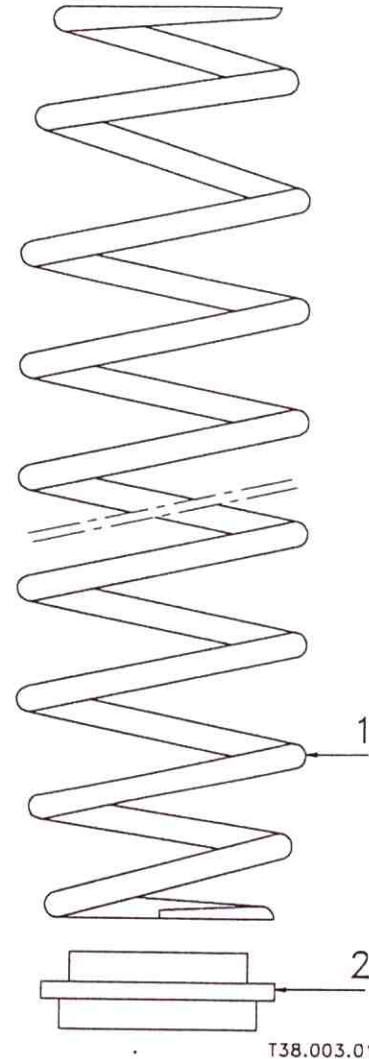


Fig. 1