

CARSUPPORT	STANDARD	HEAVY DUTY
	13B06	13B06H

MAKE:	TYPE:	YEAR:
Chrysler	Voyager, Grand Voyager	2001-
Dodge	(Mini) Ram Van, Caravan	2001-

CAR HEIGHT

After fitting the rear of the car will raise:

- Standard set approx. + 20 mm
- Heavy duty set approx. + 30 mm

PARTS

- (1) 2x auxiliary spring
- (2) 2x bump stop
- (3) 2x lower bracket
- (4) 2x washer M8
- (5) 2x locknut M8
- (6) 2x plate
- (7) 4x tapping screw $\varnothing 4.8 \times 16$

- (A) Original bump stop
- (B) Original plate


INSTRUCTIONS

1. Jack up car until rear wheels are almost off the ground.
2. Disconnect lower end of rear shock absorbers and jack up car until rear wheels are off the ground
3. Position lower bracket(3) onto the bumpstop rebound plate of the rear axle with studbolt through the hole in plate(B).

Please note:

Newer cars miss original plate(B).
 In that case fit plate(6) with tapping screws(7) (drill hole $\varnothing 3,5\text{mm}$) in the middle of the rebound plat.

4. Tighten lower bracket(3) with washer(4) and locknut(5).
5. Place bump stop(2) into narrow end of auxiliary spring(1).
6. Place widest end of auxiliary spring(1) over original bump stop(A) with bump stop(2) onto lower bracket(3).
7. Lower vehicle and re-connect shock absorbers.

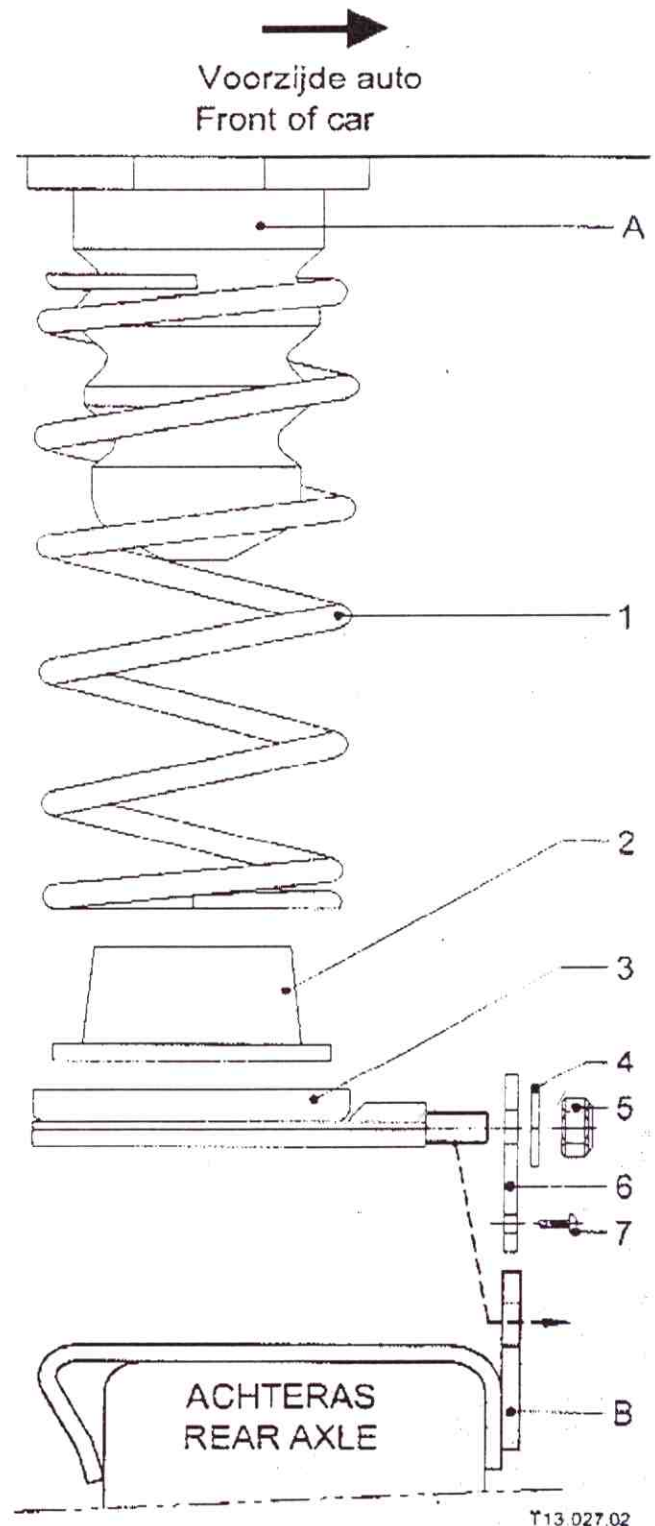

T13.027.02