

CARSUPPORT	STANDARD	HEAVY DUTY
	18A01	18A01H

MAKE: TYPE: YEAR:
 MERCEDES-BENZ Vito 1996-
 Not intended for cars with self levelling system

CAR HEIGHT


After fitting the rear of the car will raise:
 - Standard set approx. + 25 mm
 - Heavy duty set approx. + 35 mm

PARTS


- (1) 2x spring retainer
- (2) 2x bracket L/R
- (3) 4x washer
- (4) 4x bolt
- (5) 4x bumpstop
- (6) 2x auxiliary spring
- (7) 2x lower spring seat

INSTRUCTIONS

1. Disconnect lower end of rear shock absorbers.
 Jack up rear of car, do not remove main springs.
2. Place spring seat(7) in hole of the suspension arm.
3. Install spring retainer(1) and shift bracket(2) over the brake pipe bracket. **Please note: Left / Right.** Reduce clearance by shifting spring retainer(1) to the wheel side and bracket(2) to the inside and fit bolts, washers(4,3).
4. Install auxiliary spring(6) with bumpstops(5).
5. Reconnect shock absorbers
6. After fitting the auxiliary springs check and adjust the load sensing brake valve as per Mercedes manual.

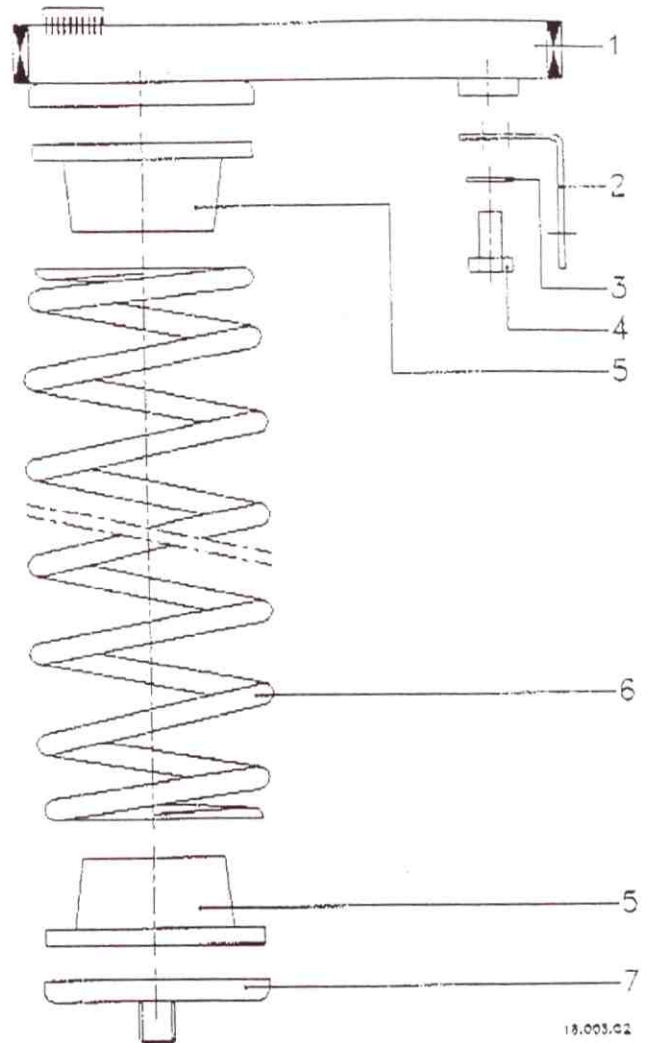

18.003.02

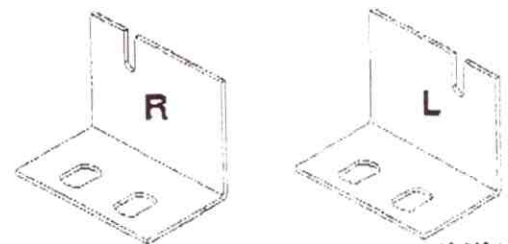

18.003.b