

## CARSUPPORT

| MERK:    | TYPE:       | JAAR:       | STANDAARD | VERSTERKT  |
|----------|-------------|-------------|-----------|------------|
| MAKE:    | TYPE:       | YEAR:       | STANDARD  | HEAVY DUTY |
| MERCEDES | W114 / W115 | 01/68-12/75 | 18B01     | 18B01H     |
| MERCEDES | W116        | 05/72-03/80 | 18B01H    |            |
| MERCEDES | W123        | 01/76-01/85 | 18B01     | 18B01H     |
| MERCEDES | W126        | 04/80-05/91 | 18B01H    |            |

## NL

### ONDERDELEN (x2)

- (1) schotel + basisplaat L/R
- (2) bumpstop (kort)
- (3) hulpveer
- (4) veerkraag
- (5) bumpstop (lang)
- (6) bout
- (7) stift

### INSTRUCTIES

1. Auto opkrikken, achterwielen demonteren.
2. Originele bumpstops verwijderen met een 6 mm stiftsleutel.
3. Monteer stift(7) met bout(6) en breng bumpstop(5) aan.
4. Plaats L/R basisplaat(1) op draagarm.
5. Plaats veerkraag(4) op hulpveer(3). Schuif boven over bumpstop(5) en plaats ondereinde met bumpstop(2) op de onderschotel(1).
6. Wielen monteren.


## UK

### PARTS (x2)

- (1) seat + bottom plate L/R
- (2) shorter bumpstop
- (3) auxiliary spring
- (4) seat
- (5) larger bumpstop
- (6) bolt
- (7) bush

### INSTRUCTIONS

1. Jack up car, remove rear wheels.
2. Remove original bumpstops (use a 6 mm Allen Wrench).
3. Mount bush(7) with bolt(6) and install bumpstop(5).
4. Install L/R bottom plate(1) on suspension arm.
5. Place spring collar on top of spring(3). Push end over bumpstop(5) and place bottom with bumpstop(2) on the seat(1).
6. Mount rear wheels.

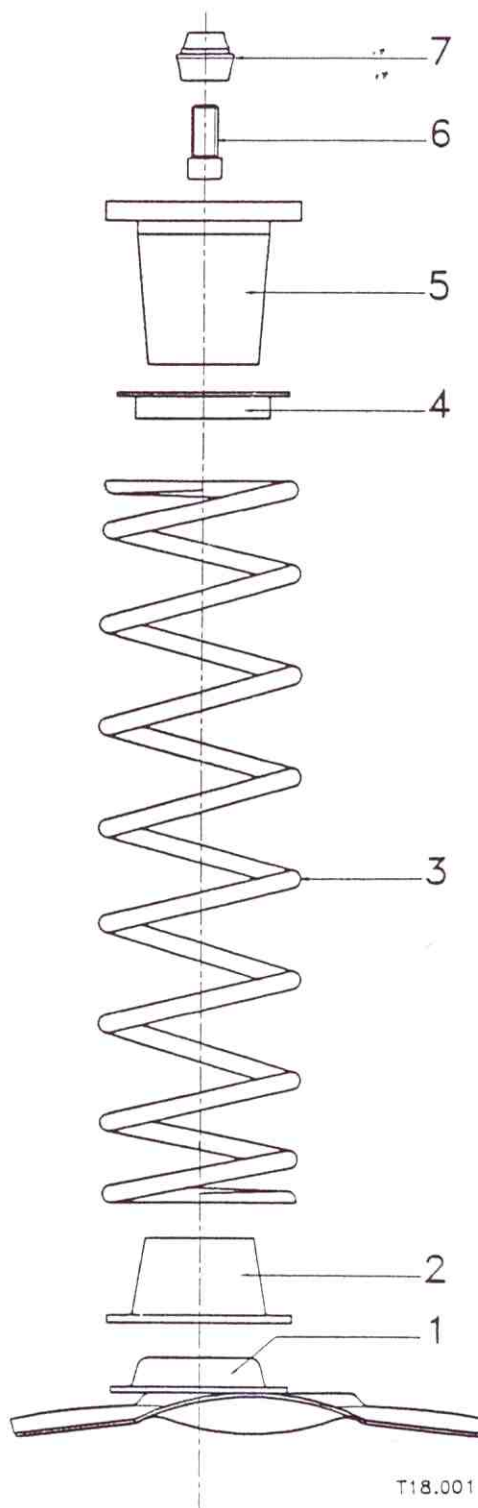

T18.001