

GRAYSTON ENGINEERING LIMITED

115 Roebuck Road • Chessington • Surrey KT9 1JZ • UK
Telephone: 020 8974 1122 Fax: 020 8974 2288

Instruction F19C06

versie E01

CARSUPPORT	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	19C06	19C06H

<u>MAKE:</u>	<u>TYPE:</u>	<u>YEAR:</u>
Flat	Multipla	1998-

CAR HEIGHT

After fitting the rear of the car will raise:


- Standard set approx. + 15 mm
- Heavy duty set approx. + 25 mm

PARTS

- (1) 2x upper seat
- (2) 2x auxiliary spring
- (3) 2x rubber cap
- (4) 2x lower seat
- (5) 2x locknut

INSTRUCTIONS

1. Disconnect lower end of rear shock absorbers.
2. Jack up rear of car, do **not** remove main springs.
3. Remove original bump stop rebound plate (not to be used again).
4. Place upper seat(1) over original bump stop.
5. Screw **widest** end of auxiliary spring(2) up through **lowest** side opening into the main spring.
6. Place lower seat(4) with studpin through hole of suspension arm
7. Place rubber cap(3) onto lower seat(4)
8. Lower the car and guide auxiliary spring(2) over original bump stop.
9. Secure lower seat(4) with locknut(5).
10. Re-connect shock absorbers.

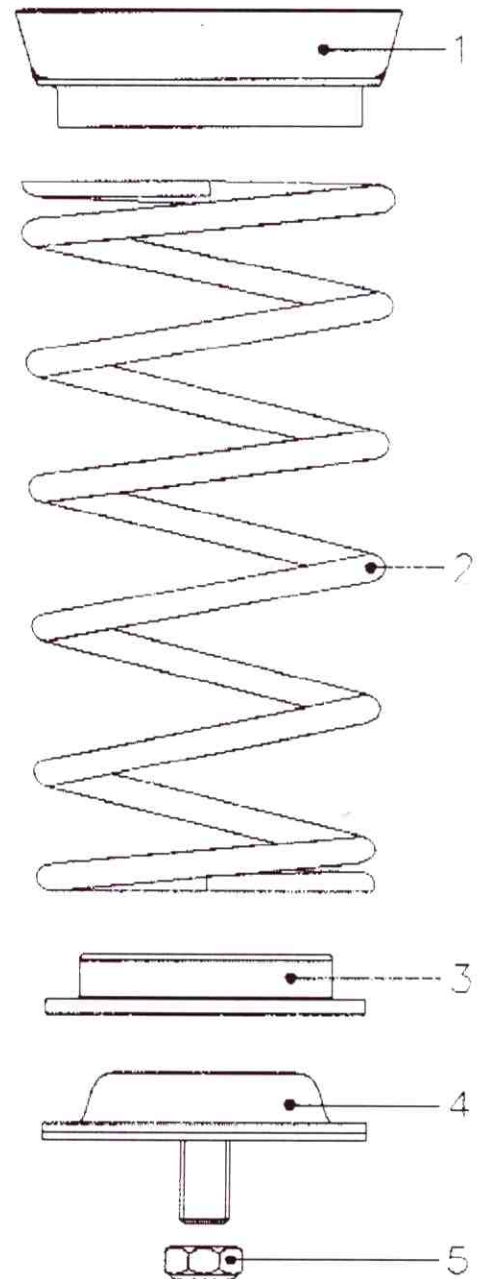

T19 016.01