

CARSUPPORT	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	19C10	19C10H

<u>MAKE:</u>	<u>TYPE:</u>	<u>YEAR:</u>
Fiat	Grande Punto	'06-
Opel	Corsa D	'06-
Vauxhall	Corsa D	'06-

CAR HEIGHT

After fitting the rear of the car will raise:

- Standard set approx. + 20 mm
- Heavy duty set approx. + 30 mm

LOCATION (see letter in set number)

"C": inside main spring

PARTS

- (1) 2x upper seat
- (2) 2x auxiliary spring
- (3) 2x lower seat

INSTRUCTIES

1. Disconnect the ABS-cables from the brackets near the pivot point and disconnect the lower end of the shock absorbers.
2. Jack up the rear of the vehicle until the main springs are almost free, do **not** remove the main springs.
3. Place lower seat(3) into the hole of the suspension arm.
4. Screw the *widest* end of auxiliary spring(2) *up*, through the *lowest* opening, into the main spring. See Fig. 2 to 5.
5. Place upper seat(1) on auxiliary spring(2) and guide the seat into the hole of the original spring seat.
6. Lower the vehicle and re-connect the ABS-cables and shock absorbers.
7. After fitting protect all the steel parts including springs with a corrosion resisting coating like Tectyl.

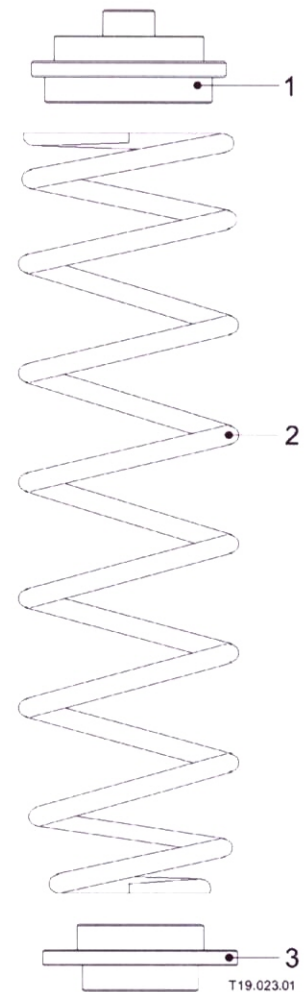


Fig.1



Fig. 2



Fig. 3



Fig. 4



Fig. 5