

CARSUPPORT

21C06

CAR HEIGHT

After fitting the rear of the car will raise:


- Standard set approx. +20 mm
- Heavy duty set approx. +30 mm

PARTS

- (1) 2x auxiliary spring
- (2) 2x lower seat
- (3) 2x rubber spring seat

INSTRUCTIONS

1. Jack up car until rear wheels are off the ground.
2. Place rubber spring seat(3) over bold in centre of mainspring.
3. Insert aux. spring(1) up into main spring through the hole in suspension arm.
4. Lift lower side of aux. spring(1) with a tool and place lower seat(2) in hole of the suspension arm.
5. Lower the car.

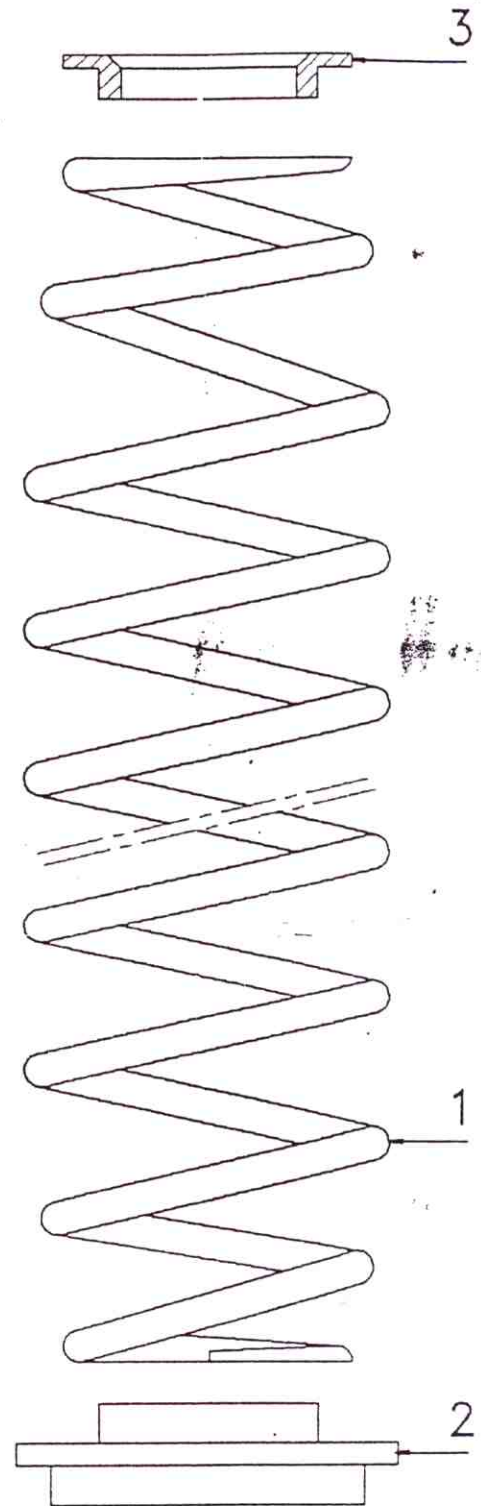

T21.008.01