

CARSUPPORT

23S06

MAKE: TYPE:
Honda CR-V

YEAR:
1998-

CAR HEIGHT

After fitting the rear of the car will raise:

- Standard set approx. + 15 mm
- Heavy duty set approx. + 20 mm


PARTS

- (1) 2x auxiliary spring
- (2) 2x rubber collar
- (3) 2x tube part with dust cover and spring collar

- (A) Original flat steel collar
- (B) Original steel collar
- (C) Original bump stop

INSTRUCTIONS

1. Remove plastic cap in trunk and dismount upperside of strut.
2. Disconnect anti-roll bar from the suspension arm.
3. Jack up car until rear wheels are off the ground
4. Disconnect lower end of strut and the suspension arm at the side of the differential.
5. Disconnect original upper springseat and main spring using a spring compressor.
6. Remove original parts (A), (B) and (C).
7. Position parts (2), (3), (1), (C), (B) and (A).
8. Re-install the original spring and upper seat.
9. Re-install strut.

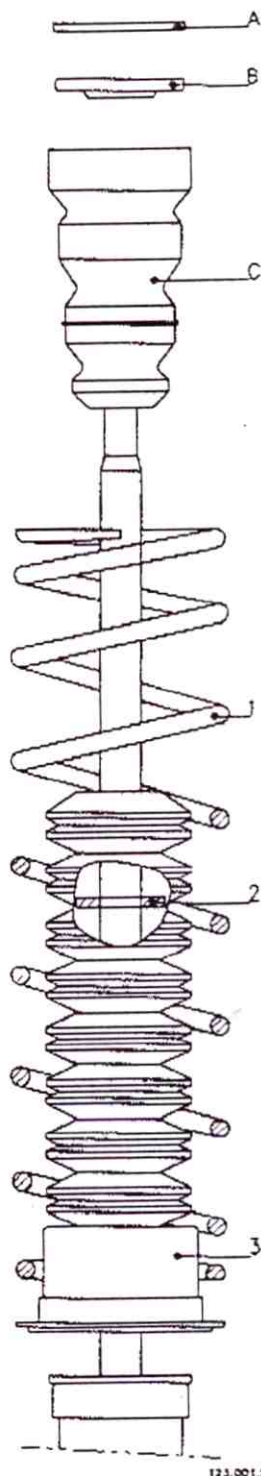

123.001.01