

| | | |
|------------|-----------------|-------------------|
| CARSUPPORT | <u>STANDARD</u> | <u>HEAVY DUTY</u> |
| | 23S08 | 23S08H |

| | | |
|--------------|-------------------|--------------|
| <u>MAKE:</u> | <u>TYPE:</u> | <u>YEAR:</u> |
| Honda | Accord type CL,CN | 2003- |

CAR HEIGHT

After fitting the rear of the car will raise:

- Standard set approx. + 20 mm
- Heavy duty set approx. + 30 mm

LOCATION (see letter in set number)

"S": on shock absorber or strut

PARTS

- (1) 2x upper spring seat
- (2) 2x auxiliary spring
- (3) 2x rubber collar
- (4) 2x tube with bellow
- (5) 2x spring seat
- (6) 2x tube centring ring

- (A) original flat bar ring
 (B) original ring
 (C) original bump stop

INSTRUCTIONS

1. Remove strut.

Inside the car:

- remove the bottom of the back seat (key 10)
- remove both sides of back of rear seat (key 10)
- disconnect the upper mount of the strut (key 14)

Under the car:

- Jack up car and remove rear wheels.
- disconnect upper side of the link of the anti-roll bar (key 14).
- disconnect bottom of strut (key 18).
- remove strut.

2. Remove original upper seat and spring.


NOTE: Use a spring compressor

3. Remove original ring(A), dustcover, ring(B) and bump stop(C).
 Original dustcover **not** to be reused.

4. Place parts (3), (6), (4) with (5), (2), (C), (B), (1) and (A).

5. Mount the original spring and upper seat.

6. Reinstall the strut, the link of the anti-roll bar, rear wheels and back seats.

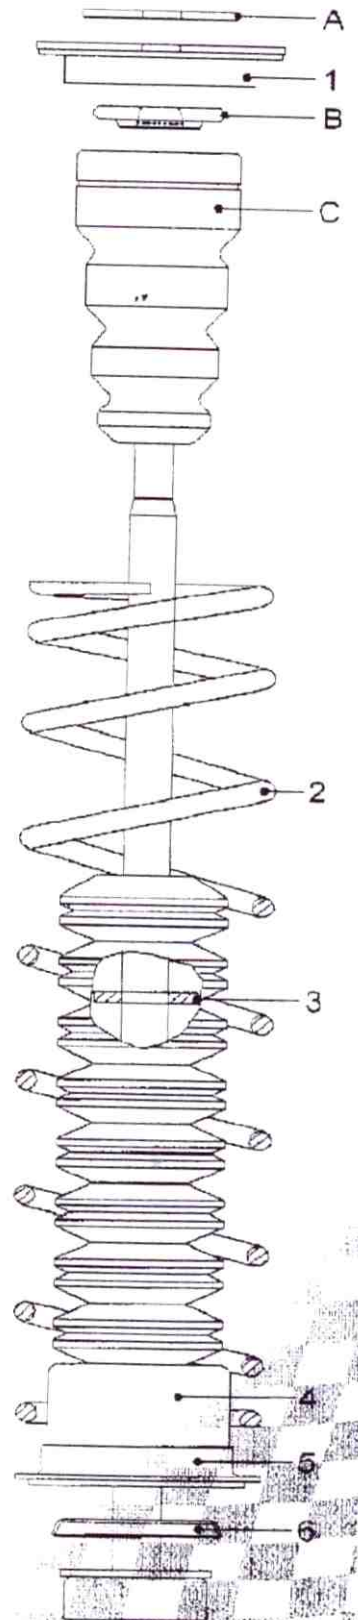

01/01/03