

STANDARD

31B06

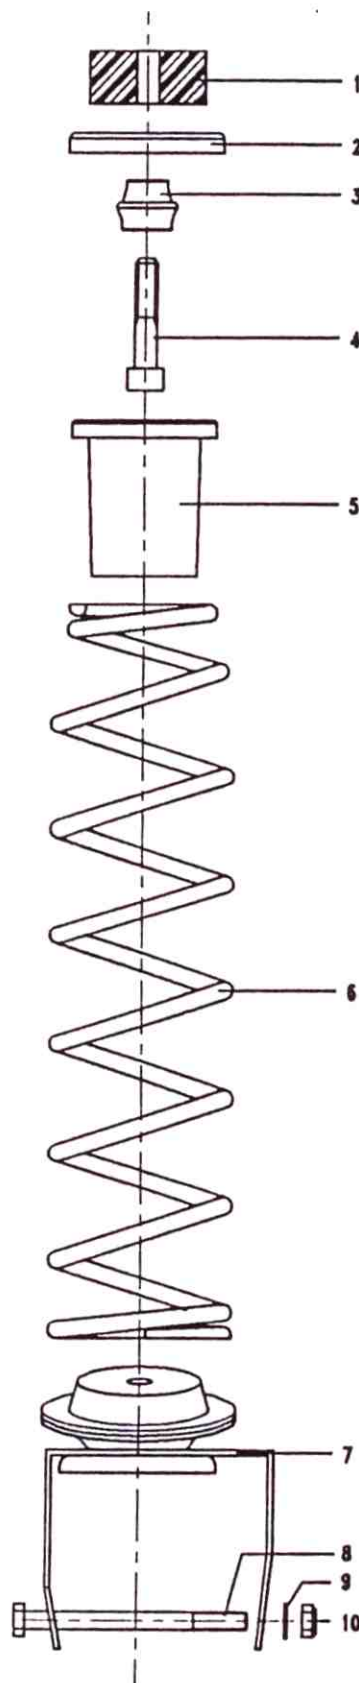
CITROËN ZX Break 94-

EPARTS (x2)

- (1) nylon washer
- (2) upper plate
- (3) bush
- (4) bolt
- (5) bumpstop
- (6) auxiliary spring
- (7) bracket (L/R)
- (8) bolt
- (9) washer
- (10) nut

INSTRUCTIONS

1. Jack up car until rear wheels are off the ground.
2. Remove original bumpstop and upper seat.
3. Install upper parts(1,2,3) using bolt(4).
4. Place bumpstop(5) over bush(3).
5. Install L/R (left/right hand side) bracket(7) in the profiled part of the L/R suspension arm. Fit bolt(8) with washer(9) and nut(10).
6. Install auxiliary spring(6) over the bumpstop(5). Compress the spring and guide it over the seat of bracket(7).
7. Check / adjust load adjusting brake valve as per Citroën manual.

**GRAYSTON ENGINEERING LIMITED**

115 ROEBUCK ROAD,
 CHESSINGTON, SURREY KT9 1JZ, U.K.
 Telephone: 0181-974 1122
 Facsimile: 0181-974 2288