

CARSUPPORT	<u>STANDARD</u>	<u>HEAVY DUTY</u>
	46S01	46S01H

<u>MAKE:</u>	<u>TYPE:</u>	<u>YEAR:</u>
Daewoo	Nubira	06/97-

CAR HEIGHT

After fitting the rear of the car will raise:

- Standard set approx. +20 mm
- Heavy duty set approx. +30 mm


PARTS

- (1) 2x auxiliary spring
- (2) 2x tube + bellow
- (3) 4x spring seat

- (A) original upper seat
- (B) original bumpstop

INSTRUCTIONS

1. Remove strut.
2. Remove main spring, original upper seat(A), dustcover and original bumpstop(B).
Dismount original dustcover (not to be re-used).
3. Place tube + bellow(3) and spring seat(4).
4. Install auxiliary spring(1) and original bumpstop(B).
5. Re-install original upper seat(A) and main spring.
6. Re-install strut.

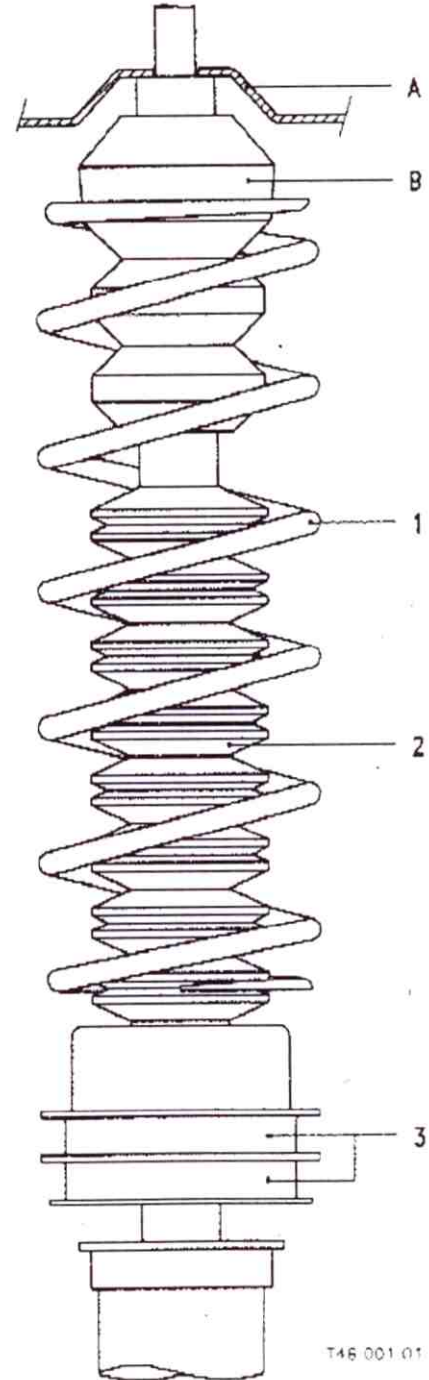

T46 001 01