GRAYSTON ENGINEERING LIMITED
115 Roebuck Road • Chessington • Surrey KT9 1JZ • UK
Telephone: 020 8974 1122 Fax: 020 8974 2288

CARSUPPORT	STANDARD	HEAVY DUTY
	31C04	31C04H

MAKE:	TYPE:	YEAR:
Peugeot	406	1995-

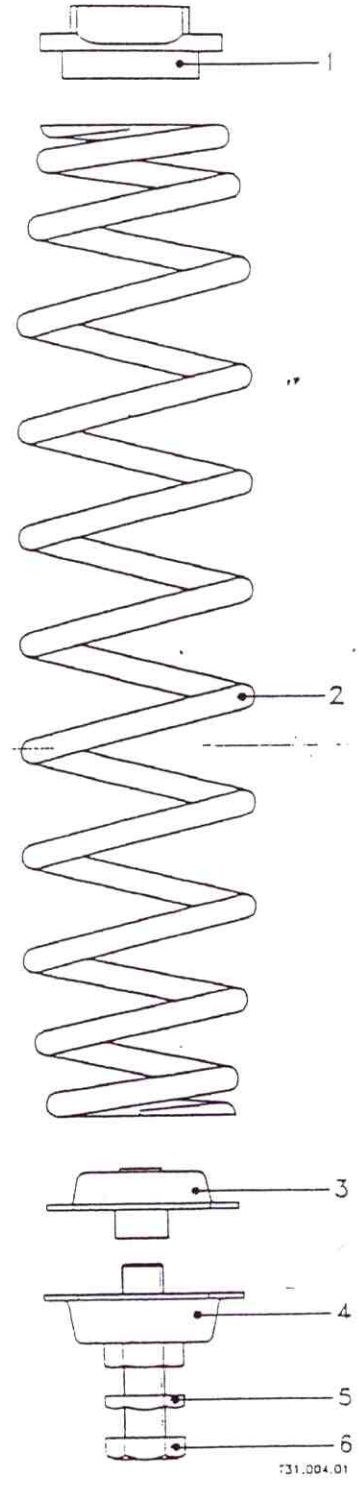

PARTS

(1) 2x nylon upper seat
(2) 2x auxiliary spring
(3) 2x spring seat
(4) 2x bottom seat
(5) 2x lock nut
(6) 2x adjusting bolt

INSTRUCTIONS

1. Jack up car until rear wheels are off the ground.

2. Screw auxiliary spring(1) through the hole in suspension arm.
   Place upper seat(1) and screw auxiliary spring(2) further up until upper seat(1) fits into slotted hole.

3. Keep auxiliary spring(1) up and tilt bottom seat(4) and spring seat(3) through hole and position flat.

4. With rear wheels off the ground, the auxiliary springs should be adjusted with bolt(6) to give slight tension.
   Secure with lock nut(5).

   Frequently heavy loads:
   Adjust with bolt(6) to max. tension.
   Secure with lock nut(5).